

Renesas Synergy™ Platform

Migration Guide for SSP v2.0.0

Introduction

This document describes how to migrate the existing SSP v1.7.x projects to SSP v2.0.0, and lists the critical steps to be taken. Tools and pin configurator-specific steps are also covered in this document for seamless migration.

Contents

1. Project Migration Issues	1
2. Screen Rotation Feature in the Renesas Synergy™ Software Package (SSP).....	3
2.1 Implementation in SSP v1.7.8 or earlier.....	3
2.2 Implementation in SSP v2.0.0	3
3. Migrating the Graphics Application from SSP v1.7.8 (or earlier) to SSP v2.0.0.....	3
4. Installing GUIX Studio from the Microsoft Store.....	8
Revision History	11

1. Project Migration Issues

This section describes some issues and workarounds related to migrating projects to SSP v2.0.0.

1. Issue ID: 16688

Some projects created with previous versions of SSP fail to generate project content and build when migrating to SSP v2.0.0. This is noticed especially when the project has multiple `pinconfig` files.

Applies to: All MCUs

Workaround:

1. If the project exists in the workspace, delete it, and import the project again.
2. Open `configuration.xml` in the Synergy Configuration editor and accept to migrate to SSP v2.0.0.
3. Save the editor and build the project as the next step. Do not click generate project content.

The project builds successfully.

2. Issue ID: 16592

Migrating a project to SSP v2.0.0 that has the comparator functions configured, does not work properly.

One of the following issues will be noticed:

1. Pin editor does not open and complains about the invalid `pinmapping.xml` file.
2. Shows messages about conflicts found.
3. Migrates with error in pin configuration.

Applies to: All MCUs

Workarounds (corresponding to items 1,2, and 3 in the issue description above, respectively):

1. **Option 1:** Manually recreate the configuration in SSP v2.0.0.

Option 2: Remove the configuration for CMP function and then migrate to SSP v2.0.0.

- Click **Continue** and **OK** on the messages shown below to continue to migrate the project. The project migrates with an error. Manually fix the error in the ACMP function (for example, by selecting the pin for VCOUT on ACMP0).

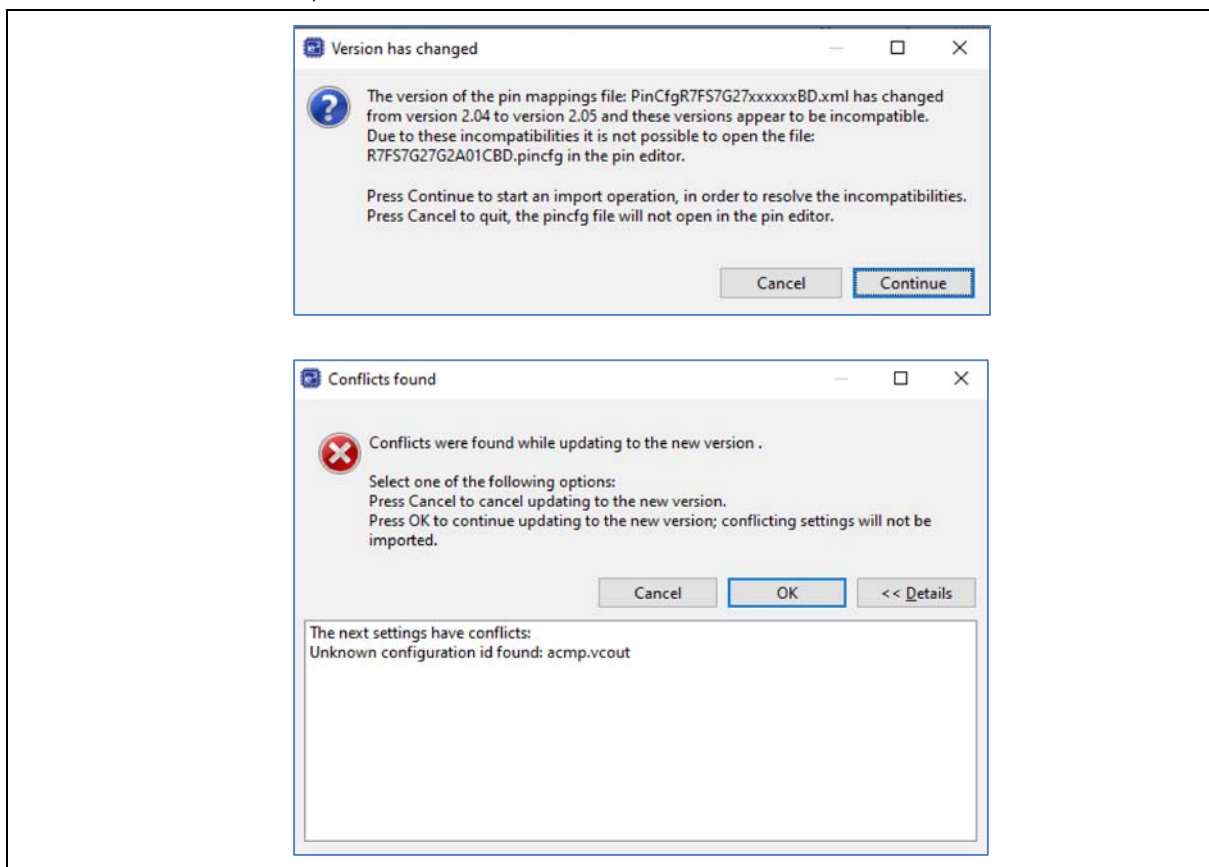


Figure 1. Messages During Project Migration

- Manually fix the error in the ACMP function (for example, by setting the operation mode).
- Issue ID: 15837**

Earlier, only one linker script was available common to all Synergy devices in a given family, and this did not account for the different flash sizes that each of these Synergy devices can have.

In SSP v2.0.0, a separate linker script is provided for each Synergy device (corresponding to their respective flash sizes).

Hence, if any users have made customized linker script changes to their Synergy projects, they must make the same changes in the newly created device-specific linker scripts as well.
 - Issue ID: 11323**

Earlier in `sf_el_ux_comms_v2` framework, `write` API did not check the Data terminal Ready (DTR) and Request to send (RTS) control signal state before writing to the terminal.

Now, with DTR/RTS check, `write` API will return error if the control signal is not enabled due to data terminal not being ready.

Any application that uses `sf_el_ux_comms_v2` framework should take care of this error handling in the application code.

2. Screen Rotation Feature in the Renesas Synergy™ Software Package (SSP)

The Screen Rotation feature lets the user change the orientation of output displayed on the LCD. With this feature, the dimensions of displays with landscape orientation can be used in portrait orientation or vice versa. It also allows the display to be used in flipped orientation. The screen rotation angles shown in Table 1 are not allowed:

Table 1. Screen Rotation Angles Not Allowed

Item No	Rotation Angle
1	90 degrees
2	180 degrees
3	270 degrees

Note: The screen rotation feature has been improvised in SSP v2.0.0 to enhance performance and reduce the memory footprint.

2.1 Implementation in SSP v1.7.8 or earlier

The Screen Rotation feature in SSP v1.7.8 provides rotation angle options in Counterclockwise (CCW) direction. The GUIX versions before 6.1.6 do not support the Screen Rotation feature and the actual rotation happens in the GUIX port with the help of an intermediate buffer known as a canvas buffer. GUIX draws the screen update on a canvas buffer first and then the GUIX port processes the screen copy to a frame buffer with rotating the image in a counterclockwise direction.

The configuration options (`sf_el_gx_cfg_t::rotation_angle`) and (`sf_el_gx_cfg_t::p_canvas`) need to be set for screen rotation.

2.2 Implementation in SSP v2.0.0

The Screen Rotation feature in SSP v2.0.0 provides the rotation angle options in Clockwise (CW) direction. GUIX version 6.1.6 or later supports screen rotation for 90 and 270 degrees and a canvas buffer is not required to rotate the frame. However, the canvas buffer is still required for 180-degree screen rotation and it works in a similar way as in SSP v1.7.8. The configuration option (`sf_el_gx_cfg_t::rotation_angle`) is no longer required and has been removed from Synergy Configurator. The rotation angle should be set in GUIX Studio from now on. The configuration option (`sf_el_gx_cfg_t::p_canvas`) needs to be set only for 180-degree screen rotation.

3. Migrating the Graphics Application from SSP v1.7.8 (or earlier) to SSP v2.0.0

The steps to migrate the graphics application from SSP v1.7.8 (or earlier) to SSP v2.0.0 are as follows:

1. Make sure that e² studio 2021.04 (or the latest version) and SSP v2.0.0 pack are installed.
2. Import a project into the workspace.
3. Open Synergy Configuration.
4. Select GUIX port on `sf_el_gx` stack.

- If your application uses 0 (no rotation), 90- or 270-degree rotation, set the following property **GUIX Canvas buffer (required if rotation angle is FLIP or 180)** to 'Not Used'. If the application uses 180-degree rotation, set the property to 'Used.'

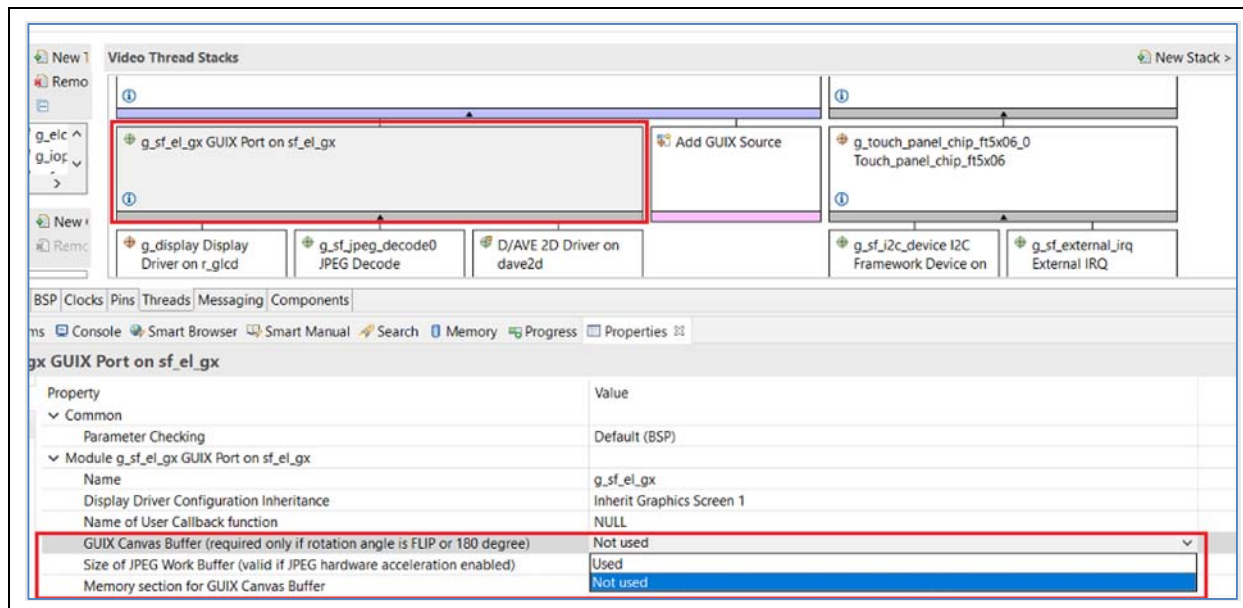


Figure 2. Setting GUIX Canvas Buffer Property

- Save the project and click on **Generate Project Content**.
- Open GUIX project (or .gxp file) with GUIX Studio version 6.1.6.2 or later.
- Click on **Configure** and then select **Project/Displays**. A pop-up window **Configure Project** will open.
- Set the **GUIX Library** version option to 6.1.6 or later as shown in Figure 3.

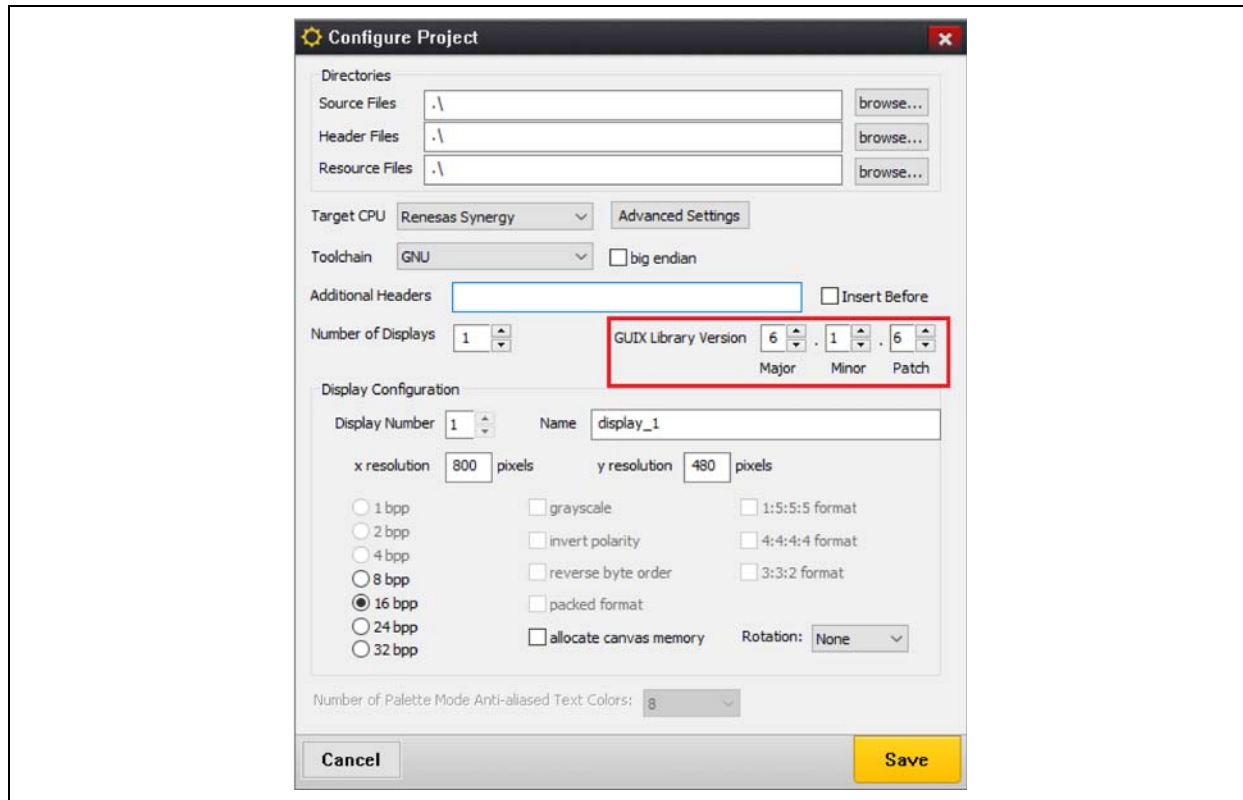


Figure 3. Configure Project Window

- Click on the drop-down menu for **Rotation** as shown in Figure 4.
Select the options as listed in Table 2 and click save.

Table 2. Rotation Options

Rotation Option	Option Selection
None	Select this option for applications which do not need Screen Rotation .
CW	Select this option if your application had Rotation angle set to 270 in Synergy Configurator for SSP v1.7.8 or earlier version.
CCW	Select this option if your application had Rotation angle set to 90 in Synergy Configurator for SSP v1.7.8 or earlier version.
FLIP	Select this option if your application had Rotation angle set to 180 in Synergy Configurator for SSP v1.7.8 or earlier version.

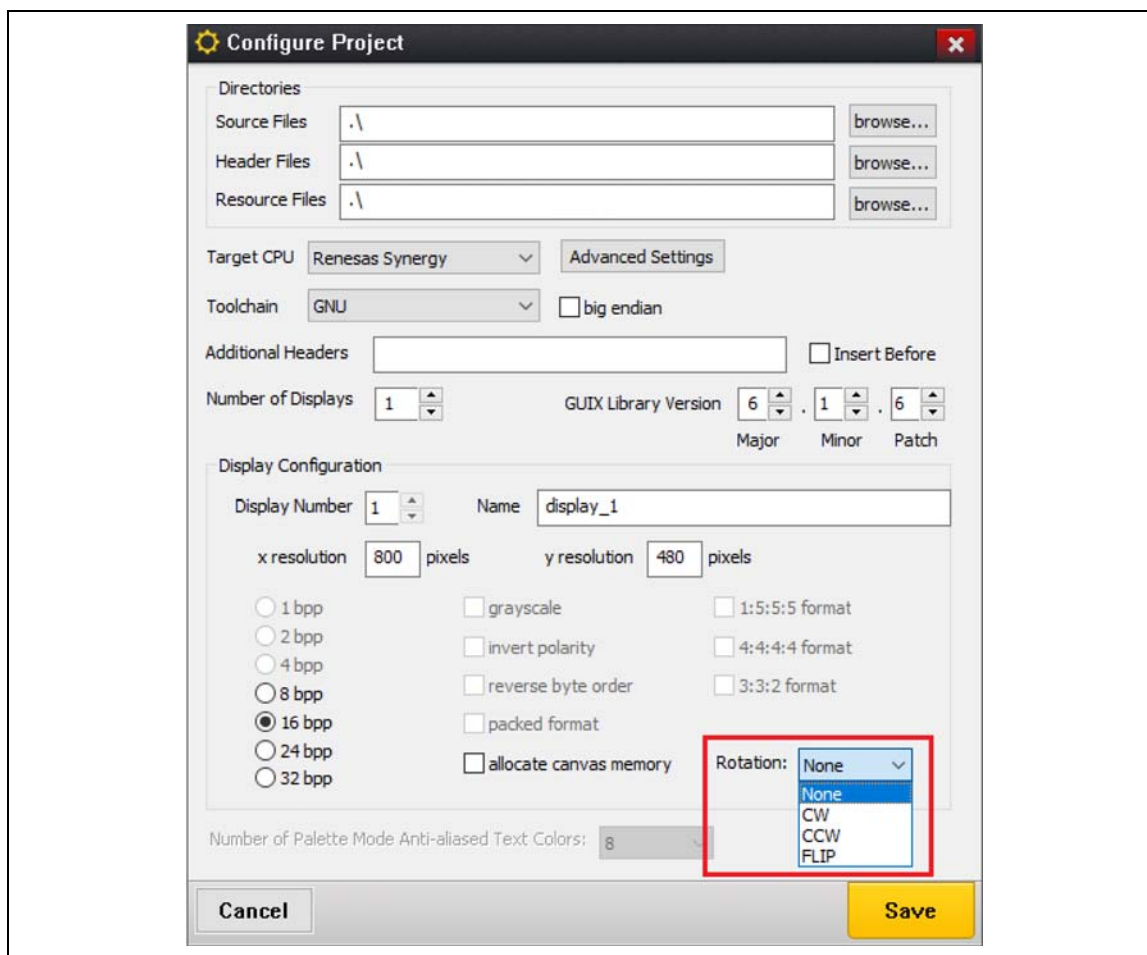


Figure 4. Choosing the Rotation Option from the Configure Project Window

11. The following image shows the pre-defined system fonts and pixelmaps to be used by the application.

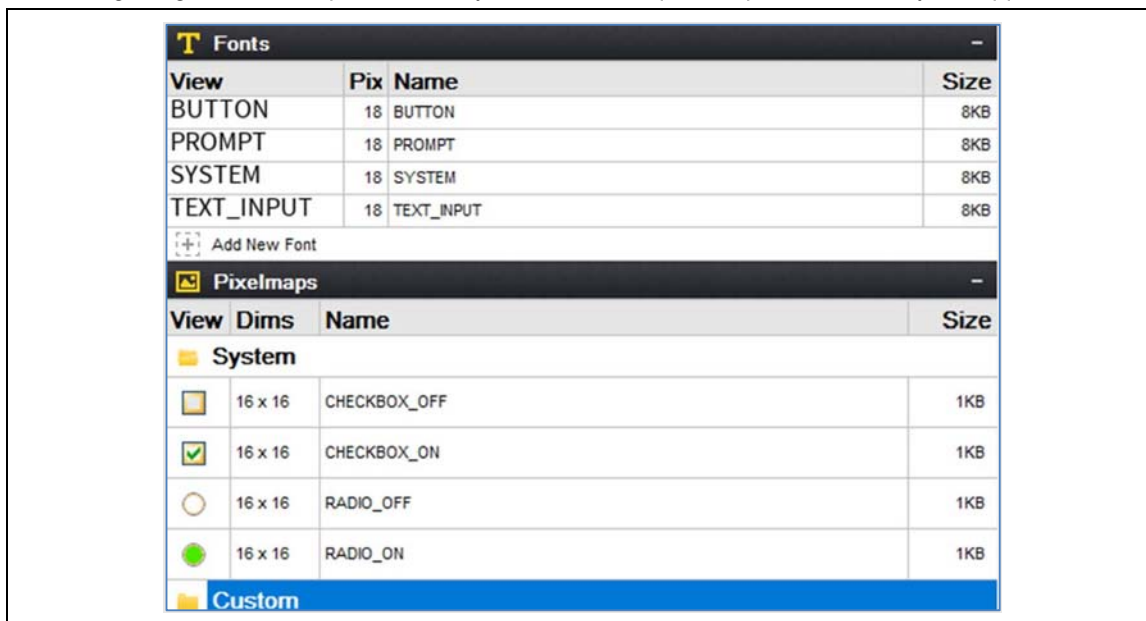


Figure 5. Pre-defined Fonts and Pixelmaps

12. The user need not specify the source path and can leave the Source Image Path window empty as shown in the following graphic.

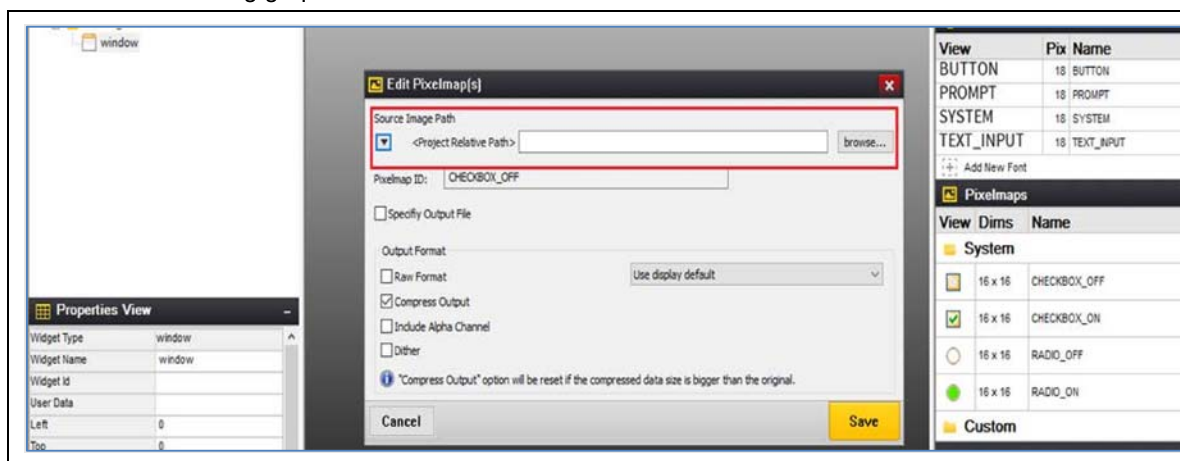


Figure 6. Pixelmap Source Image Path Entry

Note: If the user wants to change the associated fonts or pixelmap data, the path of the new fonts or pixelmap data should be specified. However, the ID cannot be changed for the system pixelmaps and fonts.

- Click on **Project** from the menu bar and then select **Save Project**. Click on **Generate All Output Files** from the drop-down menu. This should generate the specification and resource files in your project.

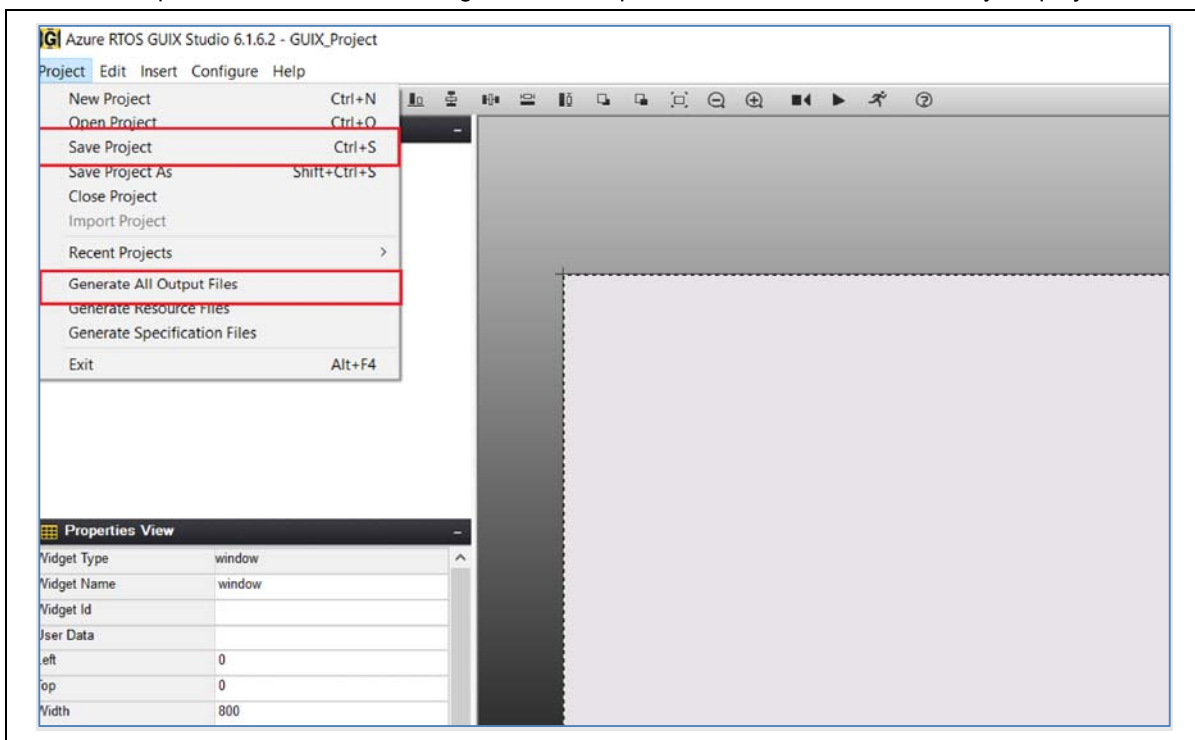


Figure 7. Generating Specification and Resource Files

- Go to the Workspace in e² studio.
- Build the application. If successful, flash the code.

Note: Applications not using Screen Rotation feature can skip the steps 4 and 5.

4. Installing GUIX Studio from the Microsoft Store

1. Download Azure RTOS GUIX Studio from the following link:

<https://www.microsoft.com/en-us/p/azure-rtos-guix-studio>

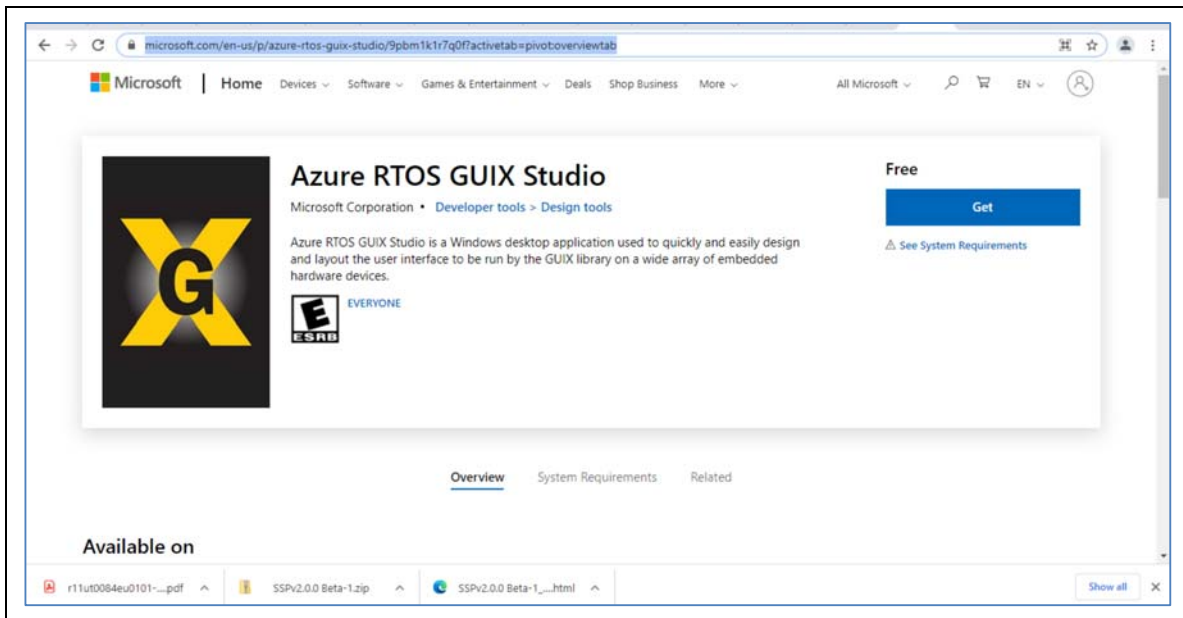


Figure 8. Downloading Azure RTOS from GUIX Studio

2. Click on the **Get** button to download GUIX Studio.
3. Once the download is successful, click on **Launch** to open GUIX Studio.

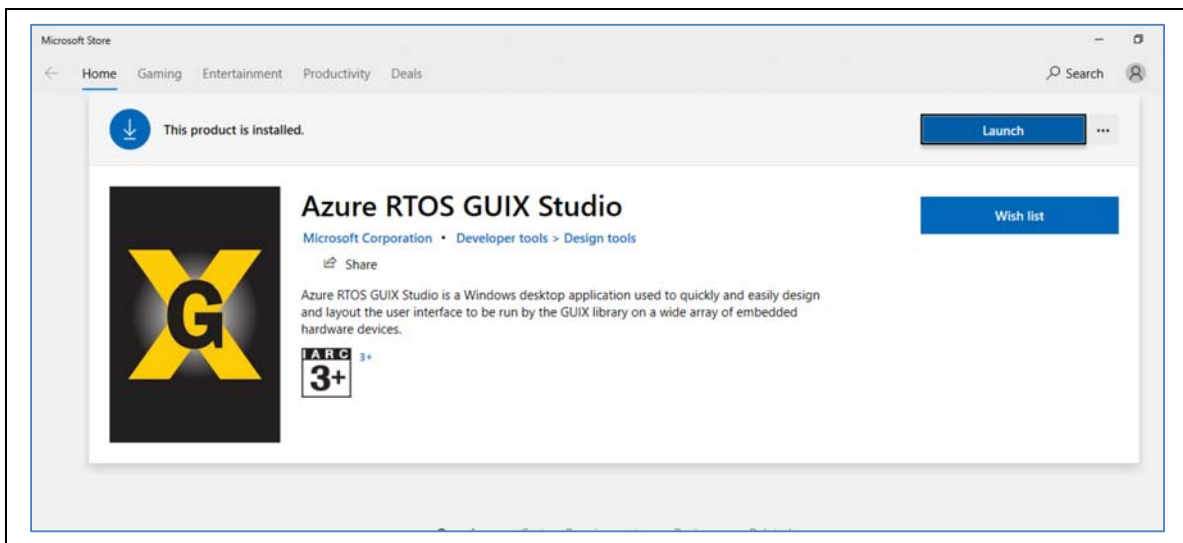


Figure 9. Launching Azure RTOS from GUIX Studio

4. Once GUIX Studio opens, the following window appears.

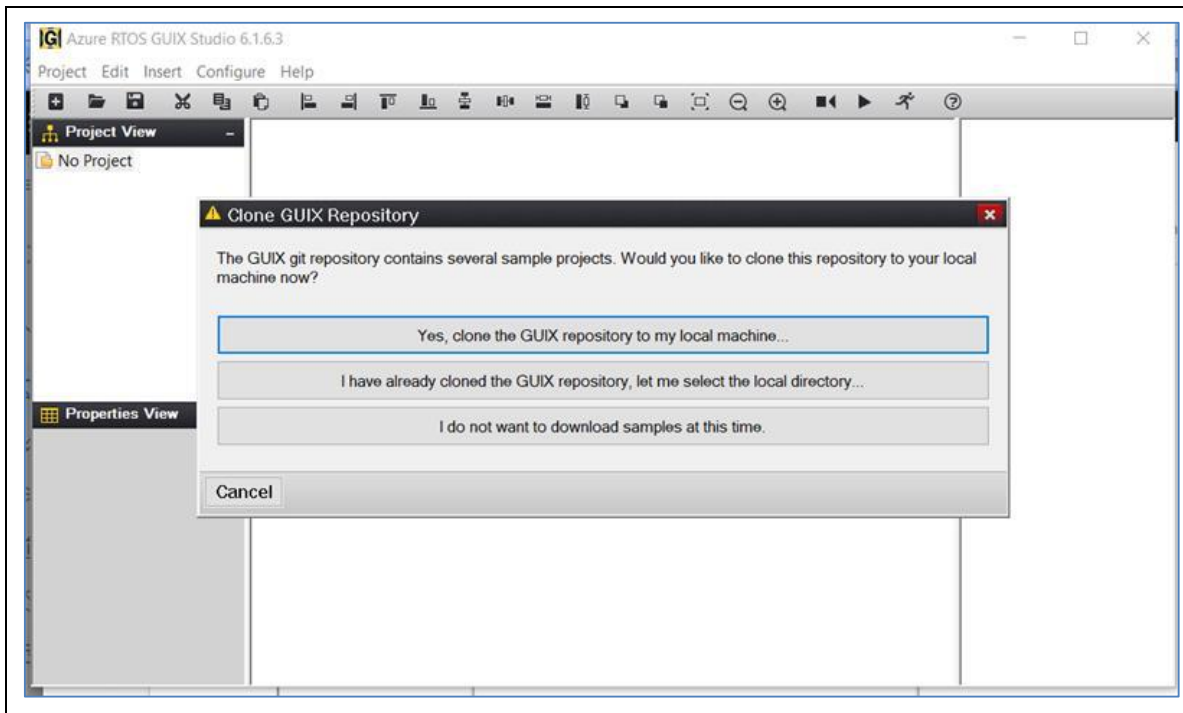


Figure 10. Selecting Option to Clone the GUIX Repository

5. Select one of the options shown in the above graphic as follows:
- option 1: to clone the GUIX Git repository to your local machine in order to get sample projects.
 - option 2: GUIX Git repository is already cloned.
 - option 3: if sample projects are not required.

Website and Support

Visit the following vanity URLs to learn about key elements of the Synergy Platform, download components and related documentation, and get support.

Synergy Software	www.renesas.com/synergy/software
Synergy Software Package	www.renesas.com/synergy/ssp
Software add-ons	www.renesas.com/synergy/addons
Software glossary	www.renesas.com/synergy/softwareglossary
Development tools	www.renesas.com/synergy/tools
Synergy Hardware	www.renesas.com/synergy/hardware
Microcontrollers	www.renesas.com/synergy/mcus
MCU glossary	www.renesas.com/synergy/mcuglossary
Parametric search	www.renesas.com/synergy/parametric
Kits	www.renesas.com/synergy/kits
Synergy Solutions Gallery	www.renesas.com/synergy/solutionsgallery
Partner projects	www.renesas.com/synergy/partnerprojects
Application projects	www.renesas.com/synergy/applicationprojects
Self-service support resources:	
Documentation	www.renesas.com/synergy/docs
Knowledgebase	www.renesas.com/synergy/knowledgebase
Forums	www.renesas.com/synergy/forum
Training	www.renesas.com/synergy/training
Videos	www.renesas.com/synergy/videos
Chat and web ticket	www.renesas.com/synergy/resourcelibrary

Revision History

Rev.	Date	Description	
		Page	Summary
1.00	May.18.21	—	First release for GUIX Studio migration for SSP v2.0.0.
1.01	May.28.21	—	Updated to include SSP v2.0.0 migration content.
1.02	Apr.04.21	3, 4, 5, 6, 8	Minor updates for GUIX Studio configuration.

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan

www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:

www.renesas.com/contact/.