

Renesas Synergy™ Platform

R12AN0064EU0100

Getting Started Guide for LED Toggle Kit

Rev.1.00

Jun 29, 2017

Introduction

This guide will show you how to get started with the Synergy SK-S7G2 Starter Kit. You will learn how to easily toggle a LED light on the board in two different ways: either by pressing a button on the board or by toggling a button in the Renesas IoT Sandbox.



Here's What You Need:

1. Renesas Synergy SK-S7G2 Starter Kit
2. Micro USB cable to power up the board
3. One of the following:
 - a. Renesas WiFi adaptor for GT202
 - b. Ethernet connection
4. WiFi Internet access (2.4 GHz only)
5. SK_S7_LED_Toggle.srec file – [download \(https://github.com/Medium-One/led-toggle-sks7/releases\)](https://github.com/Medium-One/led-toggle-sks7/releases) (Last Updated 3/23/2017)

Prerequisites

- [How to flash the SK-S7 board](http://renesas-blog.mediumone.com/how-to-flash-the-sk-s7g2-board/) (Required) (<http://renesas-blog.mediumone.com/how-to-flash-the-sk-s7g2-board/>)
- [Renesas IoT Sandbox Getting Start Guide](http://renesas-docs.mediumone.com/) (Optional) (<http://renesas-docs.mediumone.com/>)
- In addition to SSP v1.2.0, “Wi-Fi Framework (with GT202 Drivers)” version 1.0.0-b.3 or later (Required)

Contents

1.	Step 1: Program the SK-S7G2 Board with the LED Toggle Image	3
2.	Step 2: Activate Kit in Renesas IoT Sandbox	3
3.	Step 3: Connect the SK-S7G2 Kit to the Cloud	3
3.1	Option 1: Provision the Board for Ethernet access	4
3.2	Option 2: Provision the Board for WiFi	5
3.3	Option 3: Access Point	5
4.	Step 4: Visualize Data on Dashboard	6
5.	Loading project into e ² studio	9
5.1	Development Software Requirements:	9
5.2	Importing a Project	9
6.	Appendix A	9
6.1	Summary of how the board connects to the network	9

1. Step 1: Program the SK-S7G2 Board with the LED Toggle Image

Program the SK_S7_LED_Toggle image to the SK-S7G2 board following the instructions in the “[How to flash the SK-S7 board](http://renesas-blog.medium.com/how-to-flash-the-sk-s7g2-board/)” (<http://renesas-blog.medium.com/how-to-flash-the-sk-s7g2-board/>) tutorial. Be sure to download the latest release .srec file that is specific to this kit. This can be found under the HERE’S WHAT YOU NEED TO GET STARTED section.

2. Step 2: Activate Kit in Renesas IoT Sandbox

[Click here to activate the kit](https://medium.com/partner/activate-ma.php?partner=renesas&boardtype=sks7g2&kit=led_toggle) (https://medium.com/partner/activate-ma.php?partner=renesas&boardtype=sks7g2&kit=led_toggle) and complete the registration process to create a Renesas IoT Sandbox account preloaded with the LED Toggle IoT workflows. Once activation is completed, you will receive an email with your account credentials needed to provision the kit and access the cloud portal.

This email will include your:

- Renesas IoT Sandbox web login
- API Key
- Device username and password

3. Step 3: Connect the SK-S7G2 Kit to the Cloud

Note: The SK-S7 kit only works with 2.4-GHz WiFi.

The board can be connected to the internet via Ethernet (requires Ethernet cable) or WiFi (requires WiFi adaptor). Figure 1 shows WiFi adaptor, Ethernet connector, and micro USB cable connections into the board. The micro USB cable is necessary to power the board.

To read a quick summary on how the board connects to a network, go to APPENDIX A.

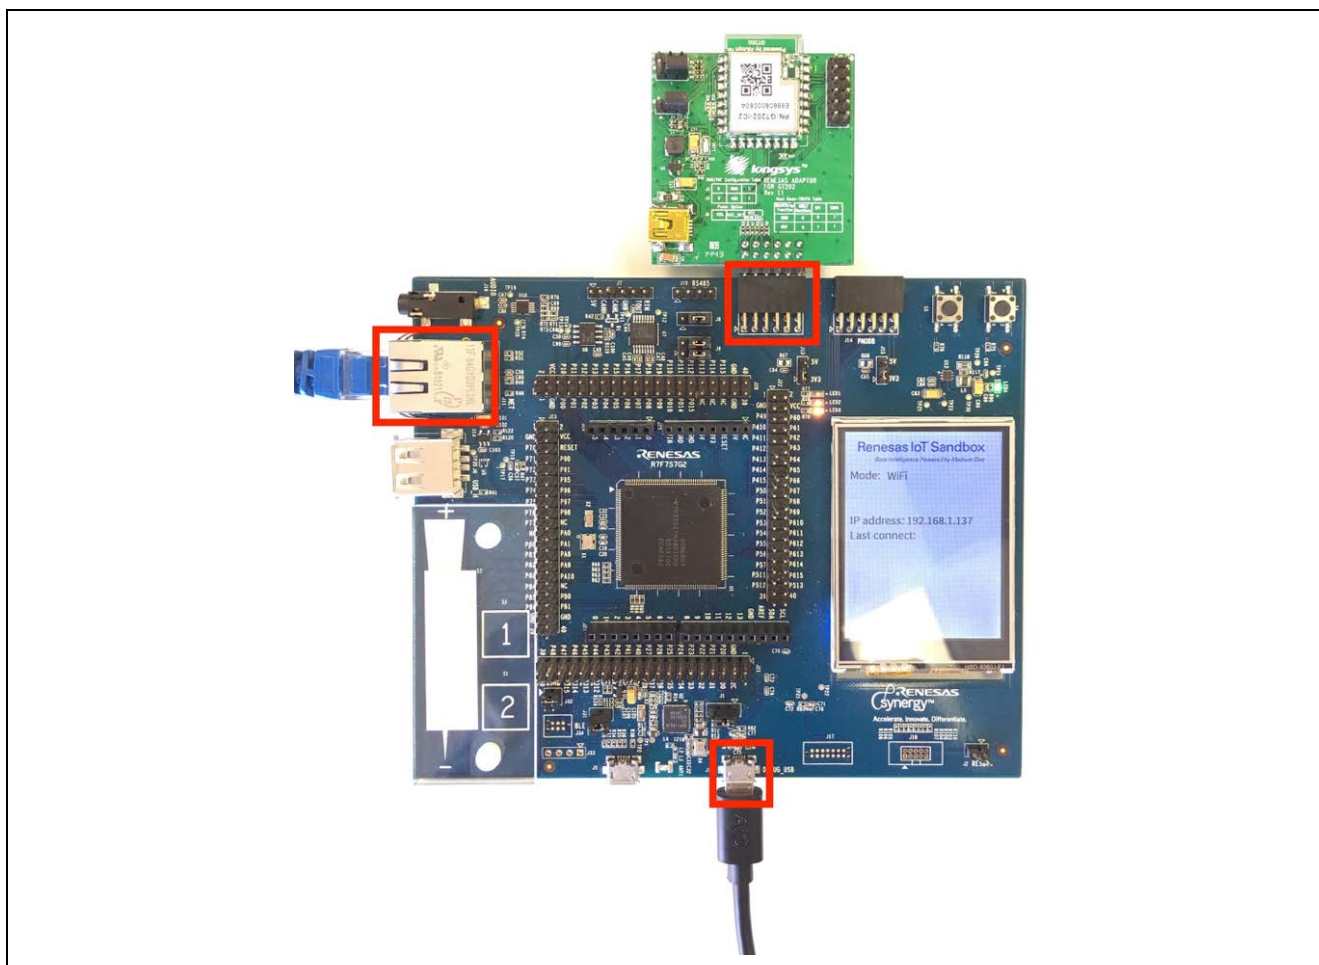


Figure 1 Cable connections

Note: Ensure your board is powered by 3.3V. To do so, connect pins 0 and 1 of jumper J13; similarly, connect pins 0 and 1 of jumper J15 to select 3.3V option. See Figure 2.

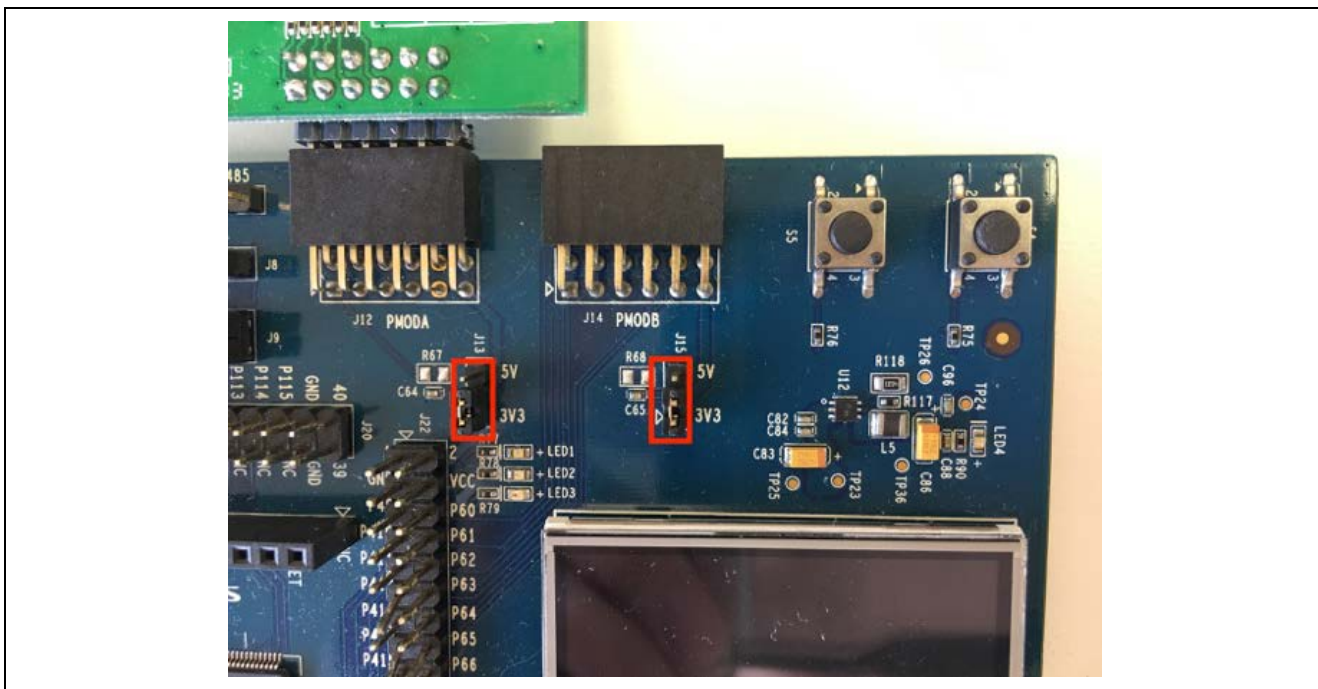


Figure 2 Jumpers for 3.3 V

The following pictures depict three different ways (Ethernet, WiFi, and Access Point) your board display may look like upon powering the SK-S7 board. This also determines what provisioning you are required to do.

Note: Ethernet connection takes precedence over WiFi connection.

3.1 Option 1: Provision the Board for Ethernet access

- Connect the Ethernet cable at J11 Ethernet port.
- Power up the board by connecting the micro USB cable into J19 (DEBUG_USB) on the board. Once Ethernet is detected, the board will boot up in provisioning mode.
- When you see the screen as shown in Figure 3, connect to the IP address printed on the screen using the browser on your computer. Make sure your computer is on the same network as the board. This will connect you to the provisioning page of the board to set up the IoT Sandbox credentials. **Note: Keep a copy of your activation email readily available.**

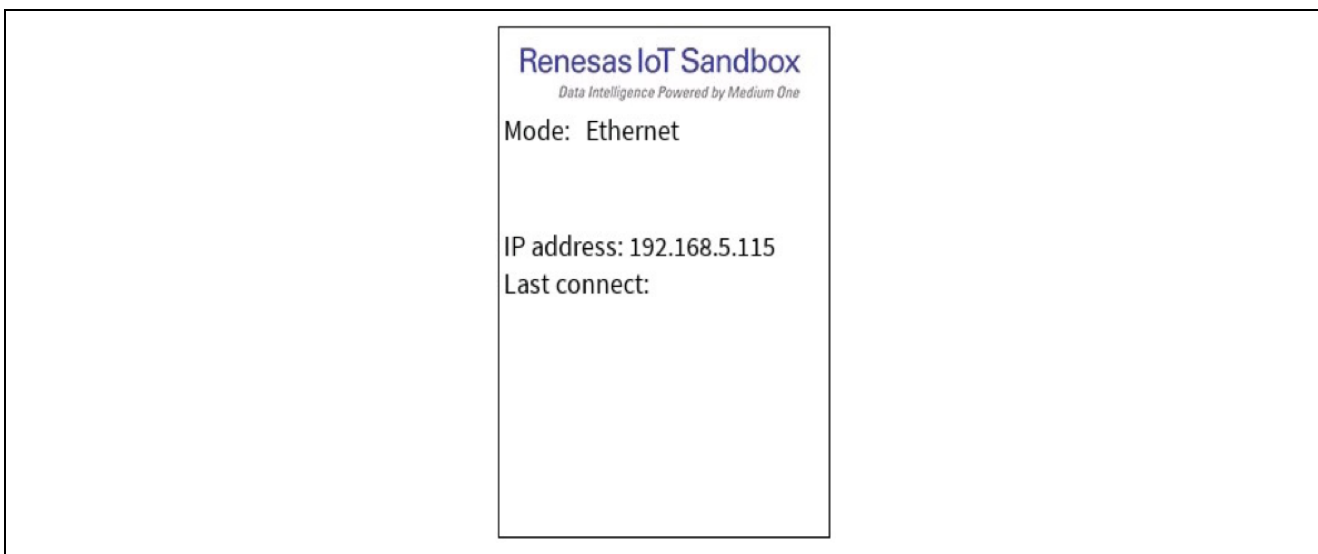


Figure 3 Ethernet mode

3.2 Option 2: Provision the Board for WiFi

- Connect the Renesas WiFi Adaptor for GT202 to J12 (PMODA) on the board and disconnect the Ethernet cable.
- Power up the board by connecting the micro USB cable into J19 (DEBUG_USB) on the board. Once the WiFi Adaptor is detected, the board will boot up in provisioning mode and become a WiFi Access Point.



Figure 4 WiFi mode

3.3 Option 3: Access Point

- If this is your first time provisioning the board with a WiFi adapter, you will see the picture as shown in Figure 5. Connect your computer to the board’s WiFi access point using the WiFi on your computer. The SSID and password is printed on the SKS7 display. This is a WiFi Access Point served by the board and is a unique SSID. **Note: Keep a copy of your activation email readily available. Once connected to the board’s WiFi Access Point, you will not have internet access on your computer.**

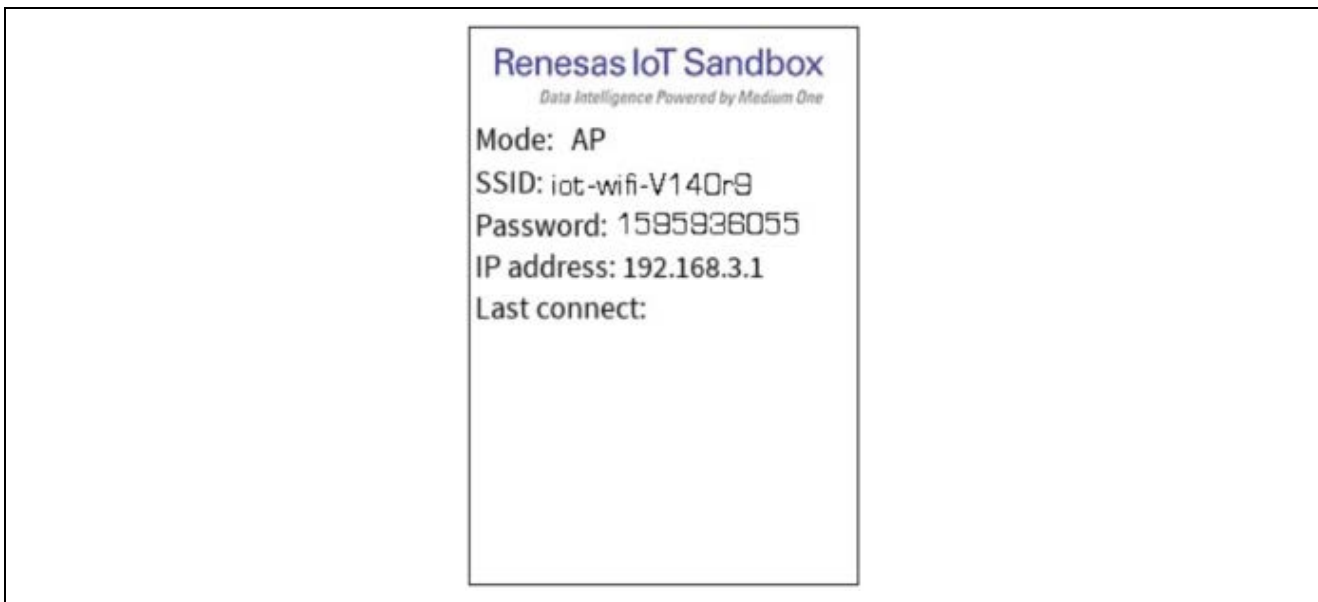


Figure 5 Access point mode

Once the provisioning page is loaded, you will see a form similar to Figure 6. Enter your credentials provided in your activation email.

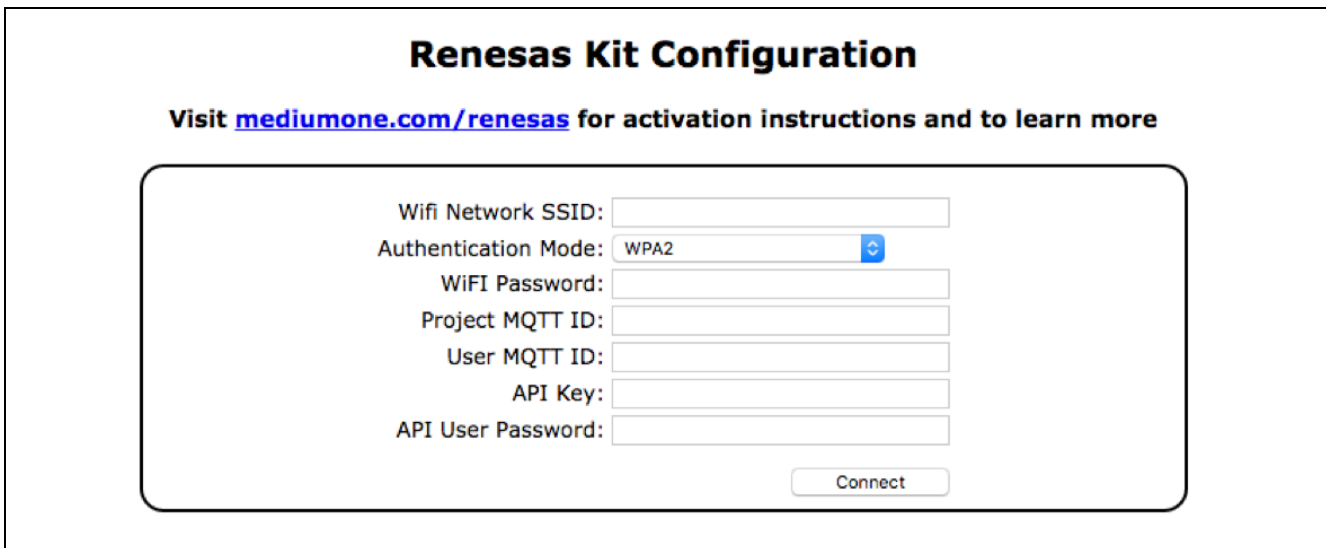


Figure 6 Provisioning page

Note: If you accessed this page before, Renesas Kit Configuration will remember your previously entered login credentials, such as Project MQTT ID, User MQTT ID, API Key, and API User Password.

After clicking ‘Connect’, you will get a message: Provisioning complete. Please reset board to continue.

Reset your board by re-inserting the micro USB cable. Now you are ready to login to Renesas IoT Sandbox and visualize data on dashboard.

4. Step 4: Visualize Data on Dashboard

Login to [Renesas IoT Sandbox \(https://app-renesas-na-sandbox.mediumone.com/login\)](https://app-renesas-na-sandbox.mediumone.com/login) with your web credentials.

Note: If you have more than one Renesas IoT Sandbox project, make sure you select this project in the top right drop down. After selecting your project, refresh your browser. If you forgot the name of your project, it can be found in the activation email.

Select Dashboard from the left navigation sidebar. On the main view, you will see the Dashboard with multiple widgets (at the bottom).

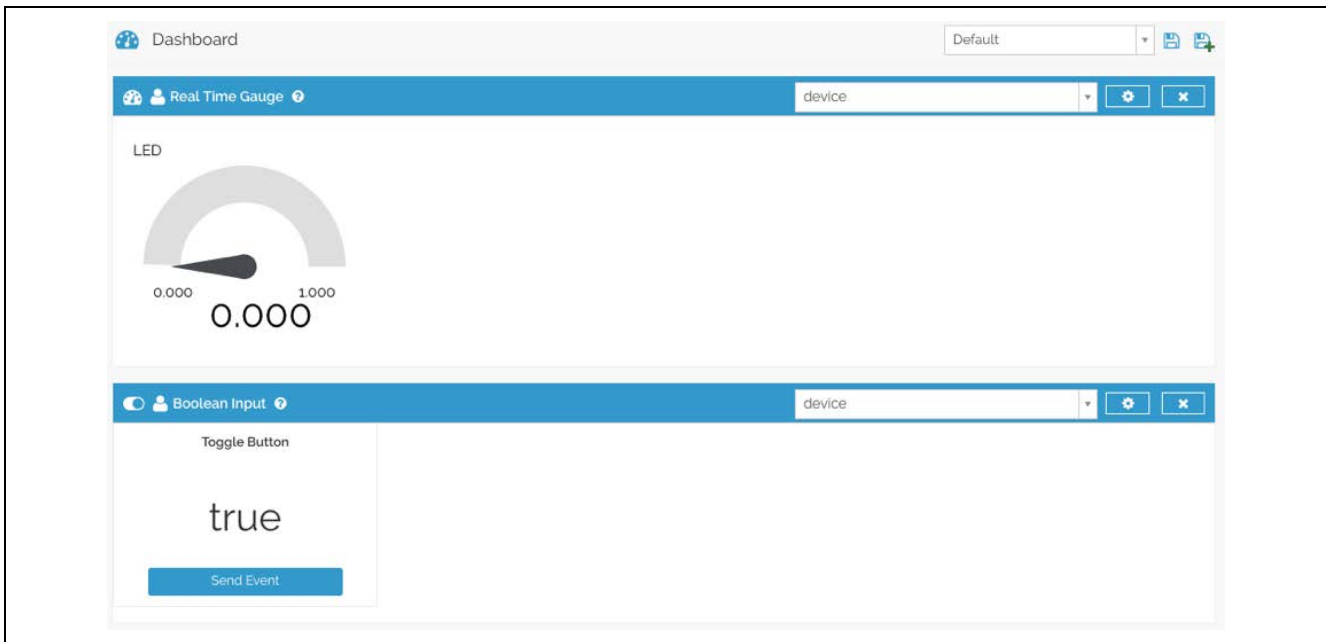


Figure 7 Dashboard

This project’s dashboard comes with preloaded widgets – **Real Time Events Stream**, **Real Time Gauge**, and **Boolean Input**.

Now, let’s test out the kit. Press the button (button 55) on the board. You should see two things happen:

1. Visually, you see a LED1 light up on the board.
2. In the **Real Time Events Log**, you get to see messages received and displayed from the board as they come in. You can use this as an indicator that the board is successfully connected to the Renesas IoT Sandbox. Note: the messages are received in JSON format.

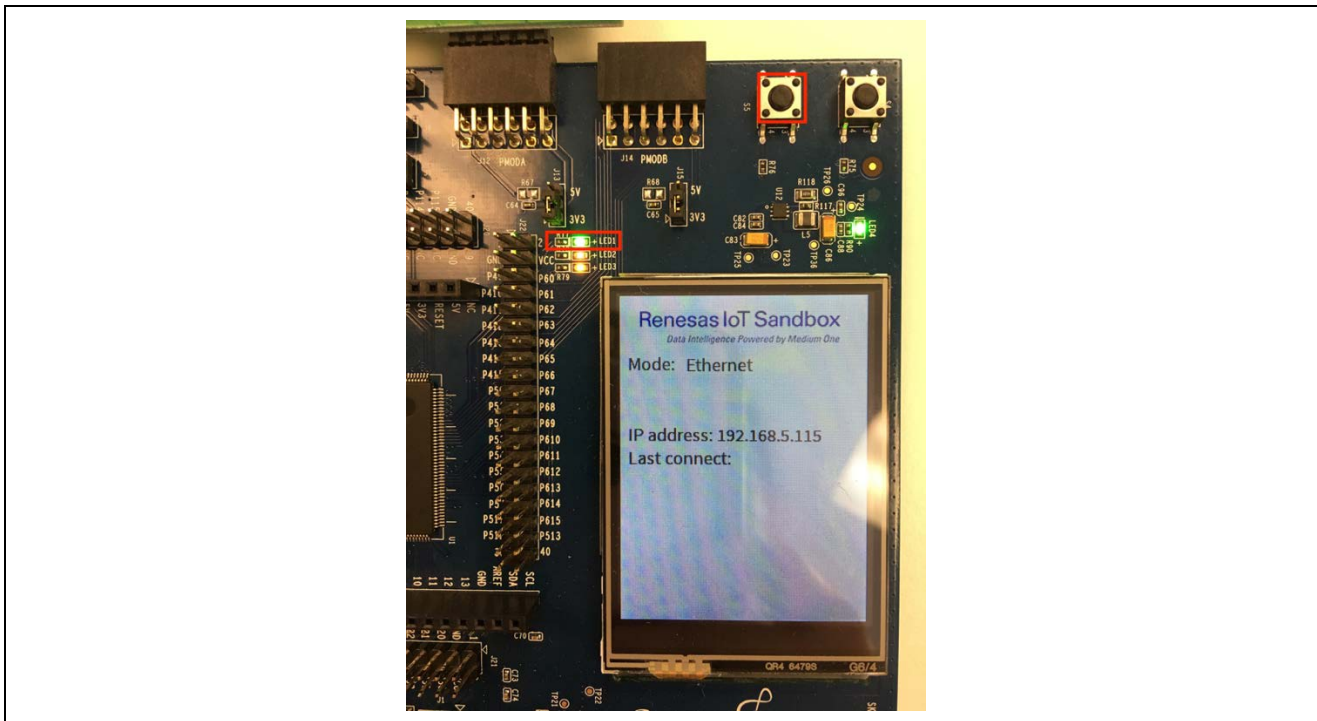


Figure 8 Testing the kit

The following is a Real Time Event log file. As you can see, the button was pressed twice represented by two event logs; the first event reports the LED turning off, the second event reports the LED turning on.

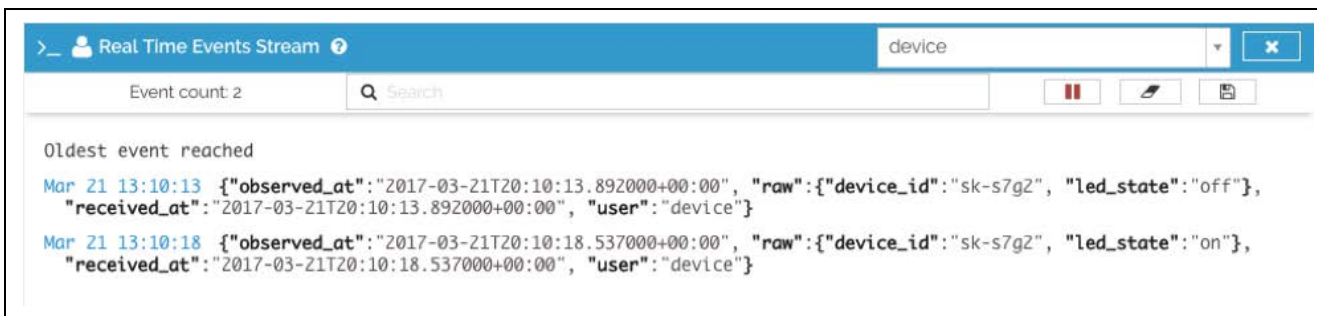


Figure 9 Real time event stream

Finally, you can also toggle the LED light by pressing the “Send Event” button on the **Boolean Input** widget. Once you click this button, the LED light on board should toggle, as well as, the events appear in the log file.

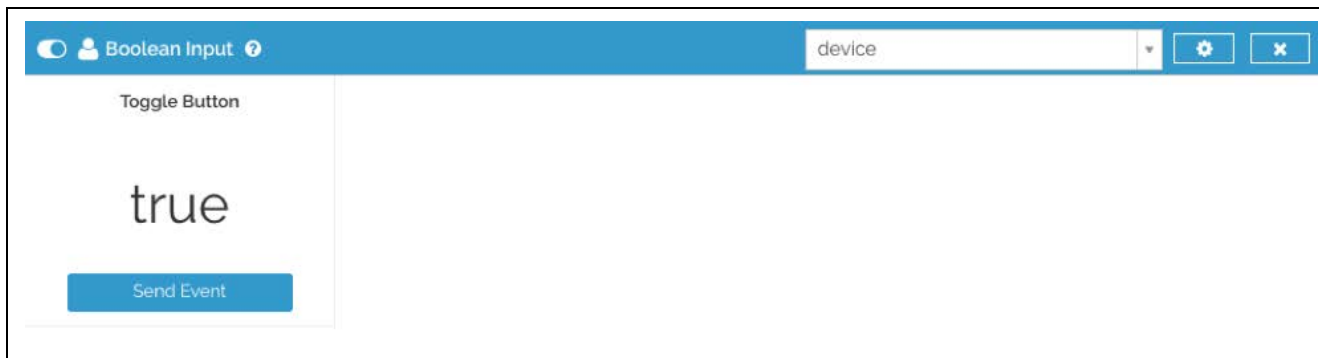


Figure 10 Boolean input

Same type of events log file occurs:

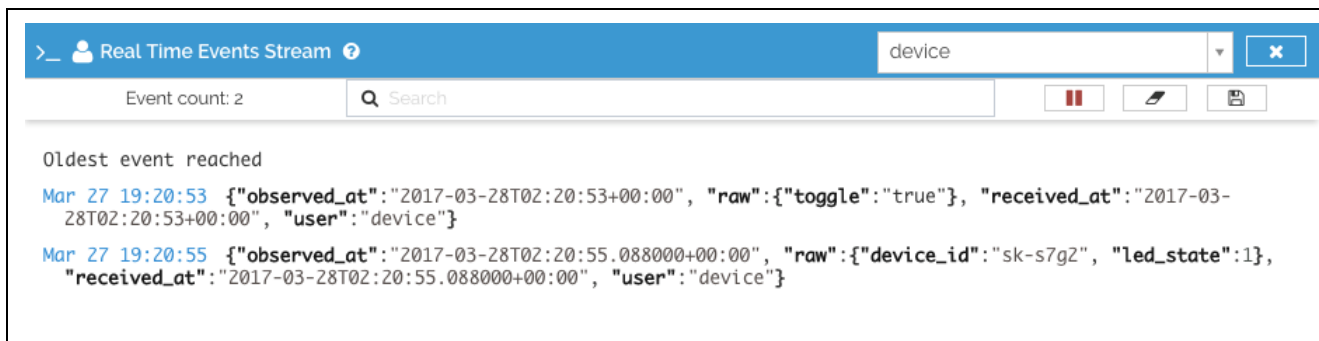


Figure 11 Real time stream

Note: The board display shows some connectivity information such as mode (Ethernet or WiFi), IP address, and Last Connect (date and time) of last successful connection to your board.

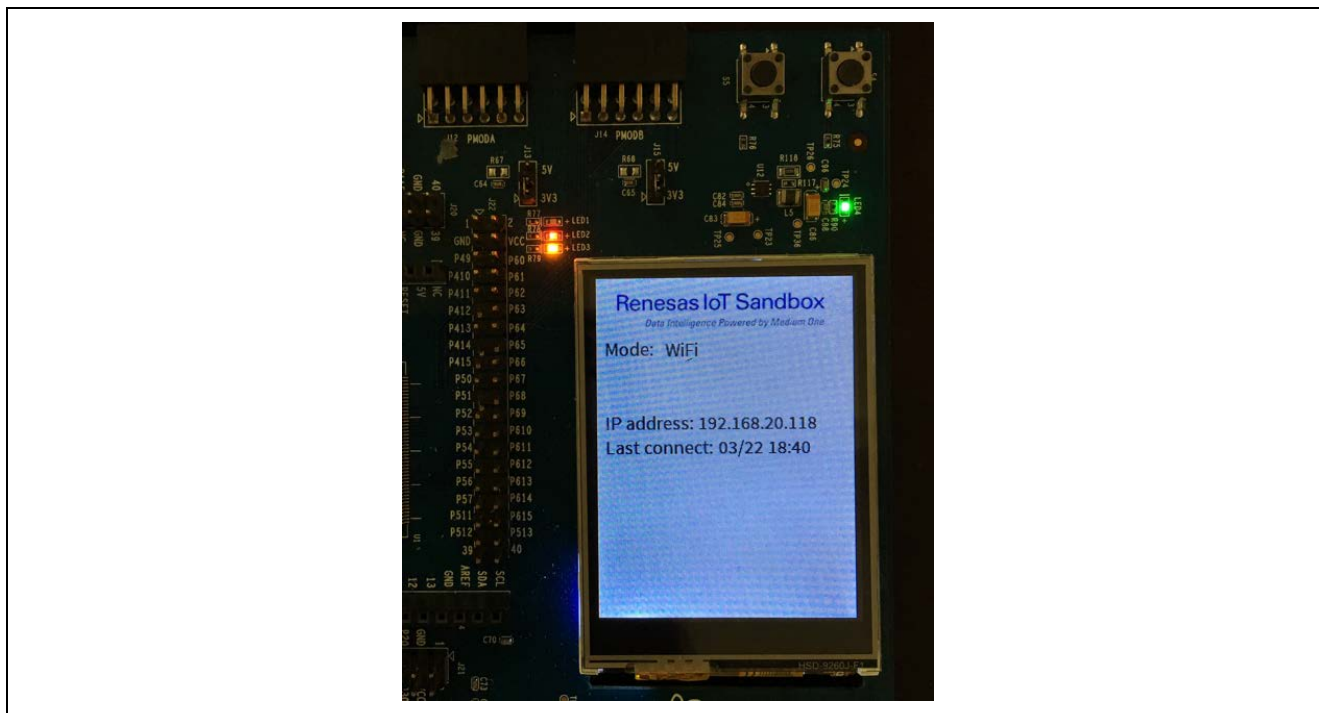


Figure 12 Board display

Congratulations! You just learned how to easily toggle an LED light on the board by using two different methods – pressing a physical button on the board or toggling it through the cloud.

You're now familiar with SK-S7G2 Starter Kit, Renesas IoT Sandbox platform, and just tapped into the possibility of exciting new projects.

5. Loading project into e² studio

5.1 Development Software Requirements:

1. e² studio version 5.3.1.xxx or newer
2. Synergy SSP 1.2.0 Gold
3. ARM GCC compiler version 4.9.3.20150529 (4.9 2015 q3)

5.2 Importing a Project

Refer to application note [Importing a Renesas Synergy™ Project](#) for instructions on importing projects.

6. Appendix A

6.1 Summary of how the board connects to the network

In the SK-S7G2 Starter Kits, the network connection is “auto-detected”:

- First, a wired **ethernet** connection is attempted. If the wired connection link is up within 5 seconds, then DHCP resolution is attempted. If an IP address is resolved within 10 seconds, the wired connection is used and mode shows “Ethernet”.
- Otherwise, a **WiFi** connection is attempted and mode shows “WiFi”. If the WiFi credentials have been provisioned and the board is able to associate with the AP within 10 seconds, the WiFi connection is used.
- Otherwise, the board enters **Access Point** mode and mode shows “AP”.

A network connection must be found before the kit will run.

Regardless of the network connection, the provisioning server is always running. You can access the provisioning page by navigating to the board’s IP in the browser.

Website and Support

Support: <https://synergygallery.renesas.com/support>

Technical Contact Details:

- America: https://renesas.zendesk.com/anonymous_requests/new
- Europe: <https://www.renesas.com/en-eu/support/contact.html>
- Japan: <https://www.renesas.com/ja-jp/support/contact.html>

All trademarks and registered trademarks are the property of their respective owners.

Revision History

Rev.	Date	Description	
		Page	Summary
1.00	Jun 29, 2017	-	Initial version

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
 2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other disputes involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawing, chart, program, algorithm, application examples.
 3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
 4. You shall not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copy or otherwise misappropriation of Renesas Electronics products.
 5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots etc.
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.
Renesas Electronics products are neither intended nor authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems, surgical implantations etc.), or may cause serious property damages (space and undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for which the product is not intended by Renesas Electronics.
 6. When using the Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat radiation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions or failure or accident arising out of the use of Renesas Electronics products beyond such specified ranges.
 7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please ensure to implement safety measures to guard them against the possibility of bodily injury, injury or damage caused by fire, and social damage in the event of failure or malfunction of Renesas Electronics products, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures by your own responsibility as warranty for your products/system. Because the evaluation of microcomputer software alone is very difficult and not practical, please evaluate the safety of the final products or systems manufactured by you.
 8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please investigate applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive carefully and sufficiently and use Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
 9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall not use Renesas Electronics products or technologies for (1) any purpose relating to the development, design, manufacture, use, stockpiling, etc., of weapons of mass destruction, such as nuclear weapons, chemical weapons, or biological weapons, or missiles (including unmanned aerial vehicles (UAVs)) for delivering such weapons, (2) any purpose relating to the development, design, manufacture, or use of conventional weapons, or (3) any other purpose of disturbing international peace and security, and you shall not sell, export, lease, transfer, or release Renesas Electronics products or technologies to any third party whether directly or indirectly with knowledge or reason to know that the third party or any other party will engage in the activities described above. When exporting, selling, transferring, etc., Renesas Electronics products or technologies, you shall comply with any applicable export control laws and regulations promulgated and administered by the governments of the countries asserting jurisdiction over the parties or transactions.
 10. Please acknowledge and agree that you shall bear all the losses and damages which are incurred from the misuse or violation of the terms and conditions described in this document, including this notice, and hold Renesas Electronics harmless, if such misuse or violation results from your resale or making Renesas Electronics products available any third party.
 11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.
(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.3.0-1 November 2016)



SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

Renesas Electronics America Inc.

2801 Scott Boulevard Santa Clara, CA 95050-2549, U.S.A.
Tel: +1-408-588-6000, Fax: +1-408-588-6130

Renesas Electronics Canada Limited

9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3
Tel: +1-905-237-2004

Renesas Electronics Europe Limited

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K
Tel: +44-1628-585-100, Fax: +44-1628-585-900

Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.

Room 1709, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100191, P.R.China
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, P. R. China 200333
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited

Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong
Tel: +852-2265-6688, Fax: +852 2886-9022

Renesas Electronics Taiwan Co., Ltd.

13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd.

80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949
Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd.

Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics India Pvt. Ltd.

No.777C, 100 Feet Road, HAL II Stage, Indiranagar, Bangalore, India
Tel: +91-80-67208700, Fax: +91-80-67208777

Renesas Electronics Korea Co., Ltd.

12F., 234 Teheran-ro, Gangnam-Gu, Seoul, 135-080, Korea
Tel: +82-2-558-3737, Fax: +82-2-558-5141